

AMS NanoPro™ S-3012

Solvent-stable Nanofiltration Spiral-wound Element

Description The AMS NanoPro™ membrane is developed for long-term performance with high and stable fluxes in presence of solvents, featuring high pressure and temperature compatibility. AMS NanoPro™ elements are used for solvent purification and component concentration. Typical solvents include:

- Methanol, Ethanol, Propanol
- Hexane
- THF
- Acetone, Acetonitrile
- Ethyl acetate
- DMF

Performance

Cut-off Rate ⁽¹⁾ :	200 dalton
Water Flux ^(2, 3) :	85 liter/m ² /hour (50 gal/ft/day)
MgSO ₄ Rejection ^(2, 4) :	≥ 96 %


Limits

Max Pressure:	70 bar (1015 psi)
Max Pressure Drop:	0.5 bar (7.3 psi)
Max Temperature ⁽⁵⁾ :	Operating: 60 °C (140 °F) Cleaning: 60 °C (140 °F)
pH Range ⁽⁵⁾ :	Operating: 2 – 12 Cleaning: 1 – 13
Recirculation Flow:	1.8" element: 4.0 – 8.0 liter/min (1.0 – 2.1 gal/min) 2.5" element: 7.5 – 19 liter/min (2.0 – 5.0 gal/min) 4" element: 22 – 65 liter/min (5.8 – 17 gal/min) 8" element: 90 – 280 liter/min (23 – 74 gal/min)

Area	m ² (ft ²)	1.8" (aka 1812)	2.5" (aka 2540)	4" (aka 4040)	8" (aka 8040)
31 mil Spacer		0.32 (3.4)	1.6 (17)	6.1 (66)	28 (300)
46 mil Spacer		0.25 (2.7)	1.3 (14)	4.7 (51)	23 (250)

(1) Only for indication; (2) Test conditions: pressure 40 bar (580 psi), temperature 30 °C (86 °F); (3) Flux measured with demineralized (RO) water, flux may vary for individual element within ±20% range; (4) Feed solution is 0.2% MgSO₄ in demineralized (RO) water; (5) Consult AMS Technologies when intend to operate at elevated pressure, temperature, concentrations.

Dimensions

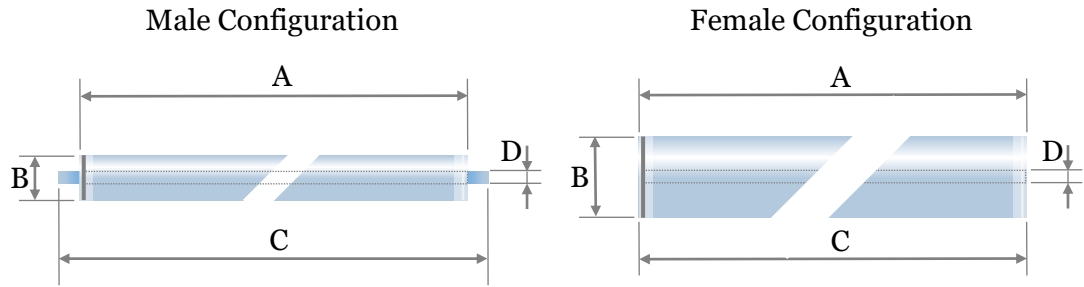

mm (inch)	1.8" (aka 1812)	2.5" (aka 2540)	4" (aka 4040)	8" (aka 8040)
Config.	Male	Male	Male	Female
A	256 (10.1)	954 (37.6)	965 (38.0)	1016 (40.00)
∅B	44.5 (1.75)	61 (2.4)	99 (3.9)	200 (7.87)
C	298 (11.7)	1016 (40.0)	1016 (40.0)	1016 (40.00)
∅D	17 (0.67)	19 (0.75)	19 (0.75)	28.5 (1.12)

Handling

Recommended Cleaning Materials. Depending on the nature of the feed material, a choice can be made among the following cleaning agents:

- Sodium hydroxide at pH 10 – 12, temperature ≤ 40 °C (104 °F);
- Hydrochloric acid at pH 1 – 2, temperature ≤ 40 °C (104 °F);
- Nitric acid at pH 1 – 2, temperature ≤ 40 °C (104 °F);
- Na-EDTA of 0.2 – 1.0 % w/w at pH 10.5 – 11, temperature ≤ 35 °C (91 °F);
- Anionic surfactant (e.g. sodium dodecyl sulfate) of 0.5 % at pH 10.5 – 11, temperature ≤ 35 °C (91 °F).

Only demineralized (RO) water must be used for cleaning. Consult AMS Technologies regarding the use of other cleaning materials.

Lubricants. During installation, use only water or glycerin to lubricate seals. The use of petroleum or vegetable-based oils or solvents may damage the element and void any warranty.

Preservation and Storage. Plan ahead to use new membranes. The element should not be allowed to dry: store it in a sealed bag, at 4 – 30 °C (39 – 86 °F). Storage solutions should be made with: 1 % w/w sodium metabisulfite. Please refer to “AMS Membrane Element Storage and Handling Instructions.”

Chemical Exposure. Do not expose the membrane to chlorine or other oxidants. Sodium metabisulfite (without catalysts such as cobalt) is the preferred chemical to eliminate free chlorine or other oxidizers in the feed.